


PROGRAMMING MHOUSE-DS1 WIRELESS DIGI-PAD

PLEASE READ ALL INSTRUCTION BEFORE INSTALLING

PROGRAMMING

CONTROL CARD

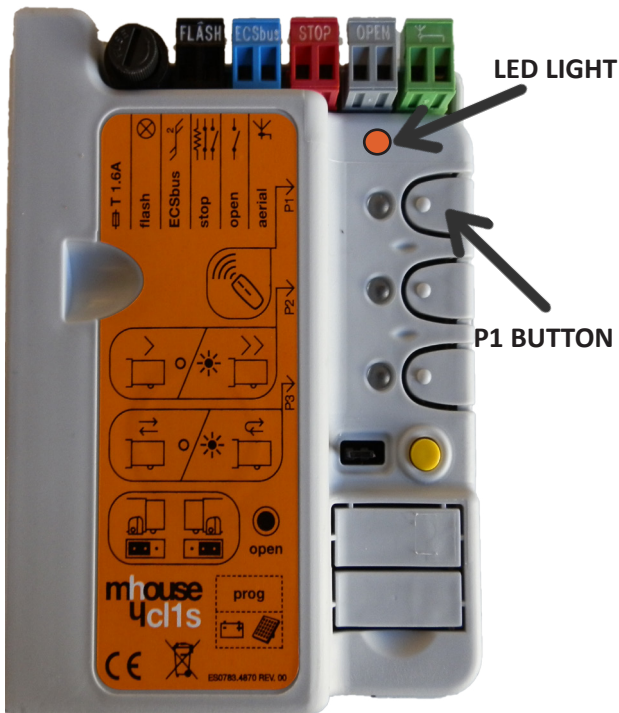

1. Hold down the top, right button (P1 BUTTON) until the LED lights up (3 Seconds), then release the button.

WITHIN 5 SECONDS

2. (ON THE MH-DS1)

Press 1 , 1 (X)

Press A (Y) and hold

At the same time the LED LIGHT on the CONTROL CARD will flash 3 times, then release button on MH-DS1.

When the LED LIGHT goes out on the CONTROL CARD, the MH-DS1 is now programed to factory setting.

TEST THE MH-DS1

3. Test Press 1 , 1 then A

4. To change the pin to another combination follow the direction below

NOTE NOTE NOTE

IN THE MH-DS1 BOX CAME A INSTRUCTION BOOKLET

THIS WILL HAVE A PUK CODE NUMBER

DO NOT DISCARD THIS NUMBER,

UNLESS A FULL UNIT WILL BE REQUIRED

EXTRA CHARGES WILL APPLY

PROGRAMMING A UNIQUE CODE ON THE MH-DS1

1. Push Button (Z) ●

2. Type the present number 1 ,1

3. Push Button (Z) ●

4. Type the new number (up to 10 number max.)

5. Push Button (Z) ●

6. Type the new number again

7. Push Button (Z) ●

8. Three beeps are emitted if the operation has been successful other wise 5 rapid beeps are given indicating that one of the steps was unsuccessful

TEST TEST TEST

MH-DS1 DIGI-PAD

(X) 10 BUTTON (0 TO 9)



(Z)
LIGHT BUTTON
& HOME BUTTON

(Y) 1 ARE USED TO SEND THE 3 TYPES OF
COMMANDS TO A SIMILAR AUTOMATION
OR TO CONTROL UP TO 3 DIFFERENT
AUTOMATIONS OR RECEIVERS

