


PROGRAMMING REMOTE MHOUSE MOTORS

CONTROL CARD in MODE 1 (most applications)

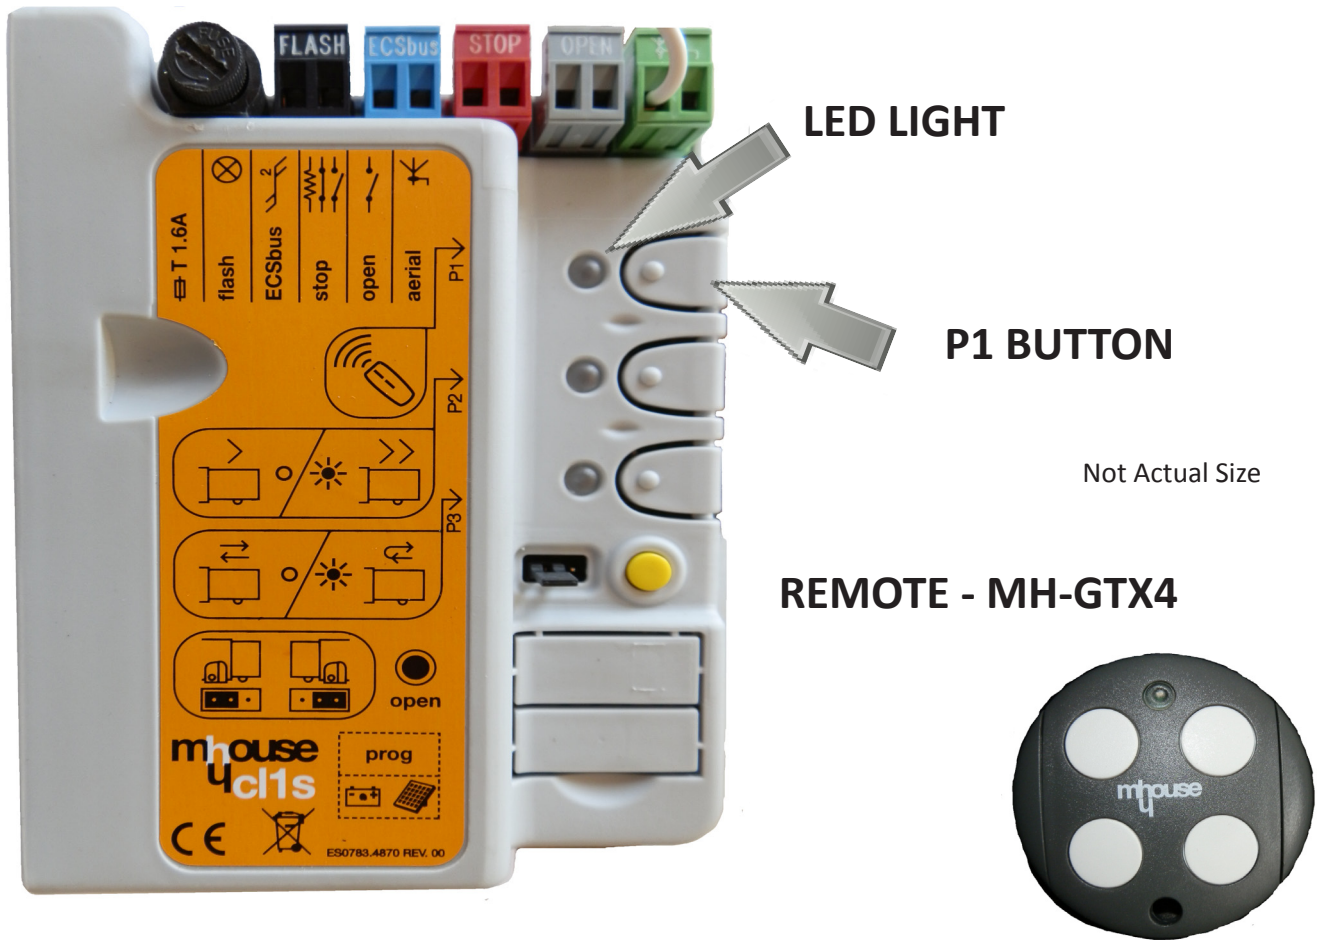

Remote Programming

1. Hold down the top, right button (P1 BUTTON) until the LED lights up (3 seconds), then release the button.

WITHIN 5 SECONDS

2. Hold down any button on the remote until the LED LIGHT on the Control Card flashes 3 times (About 4 Seconds), then release.
(Remembering what button on the Remote was pressed for opening and closing cycle)
3. When the LED LIGHT goes out on the Control Card, the programming is complete.
4. Repeat for all others remotes.

Deleting all Remote Codes

1. Press the P1 BUTTON on the CONTROL CARD and hold it
2. Wait until the LED lights up, then wait until it goes off, then wait until it has flashed 3 times.
3. Release the P1 BUTTON precisely upon the third flash.
4. Wait approximately 4 seconds for the deletion to be completed; during this time the LED LIGHT will flash very quickly.
5. Test REMOTE, they shouldn't work